

無印良品

ミニクロック・デジタル

取扱説明書

- お買い上げいただきありがとうございました。
- ご使用前に、この取扱説明書を必ずお読みのうえ、正しくお使いください。
- この取扱説明書は必ず保管してください。

付属品
ボタン形リチウム電池 CR2032 1個
取扱説明書（本書） 1部

保証書付

取扱説明書番号 8ZDA27AZ (Y1307)

製品名
ミニクロック・デジタル

お買い上げ日
年 月 日

お客様 お名前

お客様 ご住所

TEL

保証書貼付用レシート貼付欄

(保証期間)お買い上げ日より1年以内
日本国内のみ有効です。
This warranty is valid only in Japan.


●レシートが未貼付の場合は無効です。
●ネットストアご購入の場合、お買い上げ日シール（店舗印）の同梱はございません。お買い上げ日は、ネットストアマイページ「注文履歴」にてご確認をお願い申し上げます。

製品仕様


使用温度範囲：-10～50℃
使用湿度範囲：90%以下（結露しないこと）
液晶可読温度範囲：0～40℃
使用電池：ボタン形リチウム電池 CR2032 1個
電池寿命：約1年 タイマー機能を2回/日使用したとき
表示：LCD(液晶)
時計機能：クォーツ方式
時間精度：平均月差 ±30 秒
(5～35℃のとき)
タイマー：最長 99 分 59 秒 (カウントダウン/アップ)
アラーム音：電子音
アラーム鳴り時間：約 2 分
カレンダー：2011年～2099 年まで対応
サイズ：約 幅50 奥行き22 高さ50 mm
質量：約 50g (電池を含む)
ケース材質：プラスチック (ABS/PMMA)
防水機能：なし

- 液晶表示は5年を超えると表示が薄くなることがあります。
- 液晶は低温(0℃以下)では表示が薄くなったり、反応が遅くなることがあります。また、高温(40℃以上)では表示が濃くなったり、ムラに見えることがあります。
- 電池は出荷時に入れていますので、製品仕様より短くなることがあります。
- 製品仕様は改良のため予告なく変更することがあります。

1. 各部の名称と役割

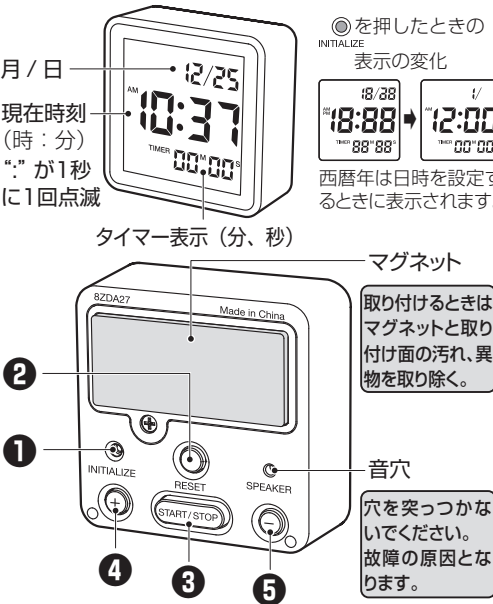

2. 電池のセット(電池の交換)

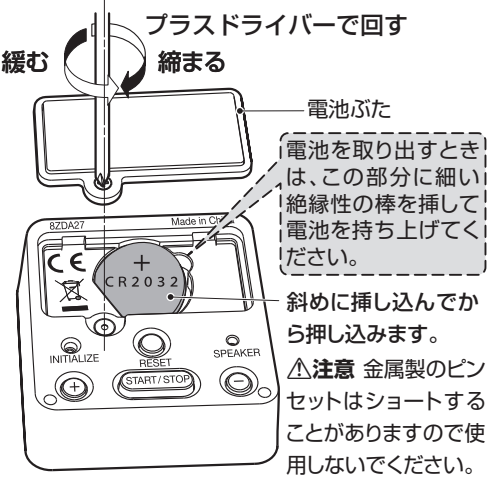

ぬれた手で触れない
ぬれる所に置かない

故障の原因になります。

トースター、レンジ、電磁調理器、レンジフードなどに近づけたり、取り付けけない

熱や電磁波、油分、蒸気などにより変形、誤作動、故障の原因になります。

マグネットで取り付けたまま動かさない

取り付け面に傷がつくことがあります。

保証書

製品名 ミニクロック・デジタル

お買い上げ日 年 月 日

お客様 お名前

お客様 ご住所

TEL

保証書貼付用レシート貼付欄

(保証期間)お買い上げ日より1年以内
日本国内のみ有効です。
This warranty is valid only in Japan.

●レシートが未貼付の場合は無効です。
●ネットストアご購入の場合、お買い上げ日シール（店舗印）の同梱はございません。お買い上げ日は、ネットストアマイページ「注文履歴」にてご確認をお願い申し上げます。

■保証について

通常のお取り扱いで万一機械故障が生じた場合、保証期間中に下記までこの保証書を添えてお申し出下されば無料にて修理・調整いたします。ただし、次の場合は保証期間内でも有料修理になりますのでご了承ください。
(ご使用の際はこの取扱説明書を必ずお読みください。)

- 1) 誤ったご使用による故障、またはお取扱いの不注意による故障
- 2) 不適当な修理や改造による故障
- 3) 火災または天災による故障
- 4) ご使用中に生じる外観上の変化(ケースの傷など)
- 5) 本保証書のご提示がない場合(電池は保証の対象外です。)
- 6) 修理の際、外観の違う代替品を使用させていただくことがありますのでご了承ください。

●この保証書は本書に明示した期間、条件のもとにおいて無料修理をお約束するものです。この保証書によってお客様の法律上の権利を制限するものではありません。

株式会社 良品計画
〒170-8424 東京都豊島区東池袋4-26-3
お客様室 ☎0120-14-6404
平日10:00～21:00 土・日・祝 10:00～18:00
輸入元 リズム時計工業株式会社
〒330-9551 埼玉県さいたま市大宮区北袋町1丁目299番12
お客様相談室 ☎0120-557-005
受付時間 9:00～17:00 土日、祝日、年始年末、夏季休日を除く

安全上のご注意 よくお読みのうえ、必ずお守りください。

図記号の説明 ㊦は、禁止(してはいけないこと)を示しています。
㊦は、指示する行為を必ず守ることを示しています。

警告 死亡または重傷などを負う可能性が想定される内容

❗ 誤飲を防止するため、小さな部品や電池は、幼児の手の届く所に置かない
必ず守る
万一、飲み込んだ場合は、すぐに医師の治療を受けてください。

❗ 電池の液漏れや発熱、破裂を防止するために、次のことを守る
禁止
●電池に傷をつけたり、分解したりしない。
●電池をショートさせない。
●電池を充電しない。
●加熱したり、火の中に入れたりしない。

❗ 電池から漏れた液に触れない
●失明や炎症などの障害が発生する危険性があります。目や皮膚についたら、すぐに水道水でよく洗い流して医師の治療を受けてください。衣服に付着した場合は、すぐに水道水で洗い流してください。
●漏れた液に直接触れないでください。電池を外して、漏れた液を布や紙でよくふき取ってください。修理が必要なときは、お買い上げの販売店にご相談ください。

❗ 磁気式カードや医療機器、アナログ時計など磁気の影響を受けやすいものに近づけない
●データの消失、誤作動、故障の原因になります。
●ペースメーカーなどの医療機器の場合、人命にかかわる場合があります。

注意 傷害を負う可能性または物的損害が発生する可能性が想定される内容

❗ 強い振動や落下など衝撃を与えない
故障や破損の原因になります。

❗ ぬれた手で触らない
さびの発生や故障の原因になります。

❗ 浴室やサウナ、岩盤浴、温室など、高温・高温になる所では使わない
さびの発生や故障の原因になります。

❗ 分解したり改造しない
けがや故障の原因になります。

❗ 下記のような場所では使わない
部材の変形、変質、劣化、故障の原因になります。
●直射日光が当たる所。
●暖房器具等の熱風や火気に近い所。
●温度が+50℃以上の所。
●温度が-10℃以下の所。
●ほこりが多く発生する所。
●強い磁気を発生させる機器のそば。
●車中や船舶、工事現場など、振動の激しい所。
●プール、温泉場などガスの発生する所。
●調理場など多くの油を使用する所。
●ゴムや軟質のポリ塩化ビニルに長い間、直接ふれさせておくと、色移りや付着、変質をすることがあります。

❗ 電池からの液漏れを防ぐために次のことを守る
●使い切った電池は速やかに取り出してください。
●長期間使用しない場合は、電池を取り出してください。

お手入れについて

- 汚れがひどいときは、水でうすめた中性洗剤や石けん水を、やわらかい布に少量つけてふき取り、その後、からぶきしてください。
- ケースなどの汚れ落としに、ベンジン、シンナー、アルコール、スプレー式クリーナー類は、使用しないでください。

3. 日時を設定する

西暦年、月、日、時刻(時、分)の順番で合わせます。

①「ピー」と鳴るまで ㊦と **START/STOP** を同時に約2秒間押し続けると西暦年が点滅します。

②「年」を⊕または⊖を押して合わせ **START/STOP** を押します。

③「月」を⊕または⊖を押して合わせ **START/STOP** を押します。

④「日」を⊕または⊖を押して合わせ **START/STOP** を押します。

⑤「時」を⊕または⊖を押して合わせ **START/STOP** を押します。
AM/PMの表示に注意してください。

⑥「分」を⊕または⊖を押して合わせ **START/STOP** を押します。
以上で日時の設定が終わり、日時の表示を開始します。

4. タイマー機能の使いかた

カウントダウン
設定した時間が経過するとアラームでお知らせ

①⊕または⊖を押して時間を設定します。
押し続けると30秒単位で早送り、早戻しになります。時間は99^M59^Sまで設定できます。
00^M00^Sに戻すには、㊦を「ピー」と鳴るまで約2秒間押し続けてください。

② **START/STOP** を押すと「ピー」と鳴ると同時にスタートします。

③ カウントダウン中に **START/STOP** を押すと停止します。
再度 **START/STOP** を押すと「ピー」と鳴ると同時にカウントダウンを再開します。

④ 00^M00^Sになると約2分間アラームが鳴ります。
㊦ **START/STOP** ⊕⊖のいずれかを押すとアラームが止まり、設定した時間の表示に戻ります。

アラームを止めないと、00^M00^Sからカウントアップを開始します。

5. 設置について

- マグネットにより、鉄などの磁性体のものに取り付けることができます。
- 鉄板などにマグネットが密着しないと保持力が弱くなり落下することがあります。
- 冷蔵庫などの扉に取り付けて使用するときは、扉の開閉をゆっくり優しく行ってください。勢いよく開閉すると落下することがあります。
- 取り付け面の表面処理や素材によっては、密着面が変質することがあります。

カウントアップ
経過時間を表示する

①タイマー表示が00^M00^Sになっていることを確認します。00^M00^S以外のときは、㊦を「ピー」と鳴るまで約2秒間押し続けてください。

② **START/STOP** を押すと「ピー」と鳴ると同時にスタートします。

③ カウントアップ中に **START/STOP** を押すと停止します。
再度 **START/STOP** を押すとカウントアップを再開します。

●カウントアップが99^M59^Sになるとタイマー機能が停止します。
㊦を「ピー」と鳴るまで約2秒間押し続けて00^M00^Sにするとタイマー機能が使えるようになります。

●カウントアップが停止しているときに⊕または⊖で時間を変更すると、機能がカウントアップからカウントダウンに切り替わります。
 START/STOP を押すと表示されている時間からカウントダウンを開始します。

マグネットで取り付け使用中のちょっとした便利な使いかた

図のように時計下部中央を軽く押すと、取り付け面が **START/STOP** を押して、タイマーのスタート/ストップが簡単に行えます。

⚠注意 強く押したり、指定以外の所を押すと時計が落下することがあります。

故障かな？

現象 表示が薄い、一部が欠けたりする。
原因 電池の残量が少ないか静電気による誤作動。
対策 電池を取り出してから入れ直す。改善されないときは新しい電池に交換する。

User’s Manual

- Thank you for your purchase.
- In order to use this product properly, please first read this User's Manual before use.
- Please keep this User’s Manual.


Accessories	
Type CR2032 button cell Lithium battery	1
User's Manual (this sheet)	1 page
User's Manual number	8ZDA27AZ(Y1307)

Specifications

Useable temperature range:	-10℃～50℃ (14℉～122℉)
Useable humidity range:	90% or less (no condensation)
LCD operating temperature range:	0℃～40℃ (32℉～104℉)
Batteries:	1 Type CR2032 button cell Lithium battery
Battery life:	Approximately 1 year when the timer function is used twice a day
Display:	LCD (Liquid Crystal)
Clock function:	Quartz system
Time accuracy:	Average monthly difference within ±30 seconds at 5℃～35℃ (41℉～95℉)
Timer:	Maximum 99min 59sec (countdown/up)
Alarm sound:	Electronic sound (beep)
Alarm duration:	Approximately 2 minutes
Calendar:	From year 2011 to 2099
Size:	Approx. 50mm width x 22mm depth x 50mm height
Product weight:	Approx. 50g (including the battery)
Case material:	Plastic (ABS/PMMA)
Waterproof function:	None


- The Liquid Crystal Display may start to dim after 5 years.
- At low temperatures (below 0℃/32℉) the Liquid Crystal Display may become dim, or the response of the display may become slow. Also, at high temperatures (above 40℃/104℉) the display may darken or become erratic.
- As the batteries are inserted at the time of shipment from the factory, there are cases when the battery life is short.
- Product specifications are subject to change without prior notice for the sake of making improvements.

1. Part names and how to use

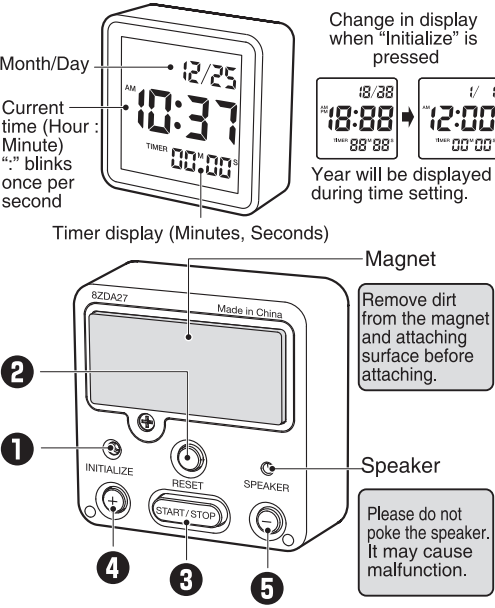

- ❶INITIALIZE (Initialize button): Resets the date, time and timer. After setting the battery or when the product is operating abnormally due to static electricity, press this button with a toothpick or similar and the clock will sound a “beep”. The clock will be set to 2011/1/1 AM12:00, TIMER 00^M00^S.
 - ❷RESET (Reset button): Resets the timer. Pressing and holding for 2 seconds will sound a “beep”, and the timer will revert to 00^M00^S.
 - ❸START/STOP (Start/Stop button)
 - Pressing this button after setting the timer will start the countdown. Pressing it again will stop the countdown.
 - Pressing this button when the timer display is a 00^M00^S. will start the count-up. Pressing it again will stop the count-up.
 - ❹⊕ (+ Button) The ⊕ / ⊖ buttons will be used when adjusting the timer or time.
 - ❺⊖ (- Button)
- | | | |
|-------------------|----------------|----------------|
| Press and release | Increases by 1 | Decreases by 1 |
| Press and hold | Fast forward | Reverse |

2. Setting the battery (exchanging the battery)

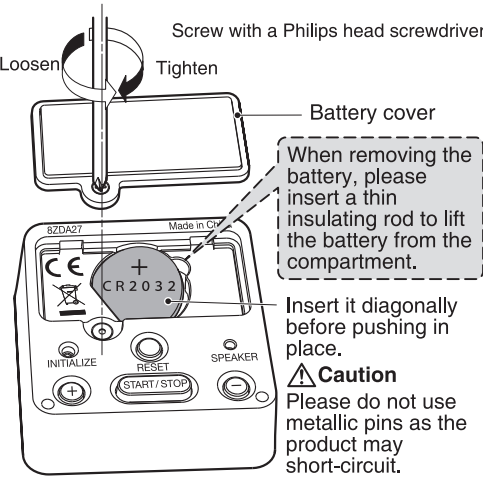

- ⚠Warning Keep out of the reach of small children
- There is the risk of accidental swallowing of parts, the battery or the battery cover.**
- 1 Type CR2032 button cell Lithium battery will be used.
- * Please do not use batteries other than the one specified.
- ❶Loosen the screw and remove the cover.
- ❷Insert the battery diagonally with the + sign facing up, and push it in place.
- * Clock will not operate if the battery +/- ends are inserted wrongly.
- ❸Tighten the battery cover screw.
- ❹Press “INITIALIZE” with a thin stick such as a toothpick.
- Please replace the battery in the following situations**
 - 1 year has passed since the battery has been inserted.
 - The liquid crystal display became dim or disappeared while in use.

- ⊘ Do not touch with wet hands.
 - ⊘ Do not place in a location where it may get wet.
 - ⊘ Do not place near or attach to toasters, microwave ovens, electronic cookers, or ventilation hoods
 - ⊘ Do not move while magnet is attached to a surface
- It may cause malfunction.
- The heat, magnetic waves, oil, or steam may cause deformation, malfunction or breakdown.
- It may damage the attached surface

Safety advice Prior to use, please thoroughly read and follow these safety instructions.

- Explanation of symbols
- ⊘ This symbol indicates prohibited conduct.
 - ❗ This symbol indicates compulsory items.

- ⚠WARNING WARNING indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
 - ❗ In order to prevent accidental swallowing, please keep small parts and batteries out of the reach of small children.
 - Compulsory
 - If accidental swallowing occurs please seek treatment from a doctor immediately.
- ⊘ In order to prevent leakage of liquid, over-heating or battery rupture, please obey the following
- Prohibited
 - Do not damage or disassemble the battery.
 - Do not short-circuit the battery.
 - Do not re-charge the battery.
 - Do not heat or expose to fire.


- ⊘ Do not touch the liquid leaking from the battery
- It poses the risk of injuries such as loss of eyesight or inflammation. If the liquid comes into contact with eyes or skin, wash immediately with clean water and seek treatment from a doctor. If the liquid is attached to clothing, please wash it off immediately with tap water.
- Do not touch the liquid directly. Remove the battery and wipe the liquid off thoroughly with cloth or paper.
- ⊘ Do not place near objects easily affected by magnetism, such as magnetic cards, medical equipment, and analog clocks.
- Prohibited
 - This may cause loss of data, malfunction or breakdown.
 - It may prove to be fatal in the case of medical equipment such as pacemakers.

Concerning maintenance

- If the exterior of the body becomes dirty, remove the dirt by wiping with a cloth slightly dampened with water-diluted neutral detergent, and clean with a dry cloth afterwards.
- Never use benzene, paint thinners, alcohol or spray cleaners or other solvents to remove the dirt on the case.

3. Setting the date/time

Year, month, day, time (hour, minute) will be set in the following order.

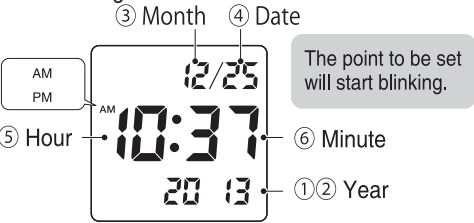

*Please start setting immediately after display starts blinking. If you do not operate any buttons for around 10 seconds, the date/time setup will automatically end.

4. How to use the timer function

Countdown

The alarm will ring after the set time has passed.

- ❶Set the time by pressing ⊕ or ⊖. If you press and hold, the time will fast forward or rewind in units of 30 seconds. **The time can be set up to 99^M59^S.** To revert to 00^M00^S, press and hold “RESET” for about 2 seconds until a “beep” sound is heard.
- ❷Pressing “START/STOP” will start the countdown signaled by a “beep” sound.
- ❸Pressing “START/STOP” during the countdown will stop the timer. Pressing it again will resume the countdown signaled by a “beep” sound.
- ❹**When the timer reaches 00^M00^S, the alarm will sound for about 2 minutes.** Pressing either “RESET”, “START/STOP”, ⊕ or ⊖ will stop the alarm, and the timer display will revert to the set time. **If the alarm is not stopped, the count-up will begin from 00^M00^S.**

5. Proper locations for use

- Product can be attached to magnetic materials such as metals using the magnet.
- If the magnet is not adhered firmly to the metallic surface, the strength of the magnet will decrease and the product may fall.
 - When product is attached to a door such as of a refrigerator, please open or close the door gently. Opening or closing the door with force may cause the product to fall.
 - Depending on the state and material of the surface, the point of contact may deteriorate.

- ⚠CAUTION CAUTION Indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
- ⊘ Do not drop or subject the product to strong impact. This may cause damage or malfunction.
- ⊘ Do not touch with wet hands. This may cause rust or malfunction.
- ⊘ Do not use in locations with high temperature and humidity, such as in a bathroom, sauna, bedrock bath or greenhouse. This may cause rust or malfunction.
- ⊘ Do not perform disassembly or modifications. This may cause injury or malfunction.
- ⊘ Do not use the product in the places listed below. This may cause the product to deform, deteriorate, or malfunction.

- Locations exposed to direct sunlight.
- In the proximity of fire or heat from heating appliances.
- Locations with temperatures above 50℃/122℉.
- Locations with temperatures below -10℃/14℉.
- Locations where there is a lot of dust.
- Locations in the proximity of machines with a strong magnetic field.
- Locations where strong vibrations exist such as cars, ships, or construction sites.
- Locations with a lot of gas such as swimming pools or hot springs.
- Locations where a large quantity of oil is used such as toasters, microwave ovens, electronic cookers, or ventilation hoods.
- Direct contact with rubber or polyvinyl chlorides for long periods may cause the product to stain, stick or deteriorate.

- ❗ In order to prevent leakage of battery liquid, please obey the following
- Compulsory
 - Please remove the battery from the product when it has run out.
 - Please remove the battery when the product is not being used for a long period of time.

Disposal of battery and clock

- Please follow the instructions of your local authorities.
- Please dispose of the clock and battery separately.

Count-up

Displays elapsed time.

- ❶Check that the timer display is 00^M00^S. If it is not 00^M00^S, press and hold “RESET” for about 2 seconds until a “beep” sound is heard.
- ❷Pressing “START/STOP” will start the count-up signaled by a “beep” sound.
- ❸Pressing “START/STOP” during the count-up will stop the timer. Pressing it again will resume the count-up.
- The timer function will stop when the count-up reaches 99^M59^S. Pressing and holding the “RESET” for about 2 seconds until a “beep” sound is heard will set the time to 00^M00^S and enable the timer function again.
- Adjusting the time with ⊕ or ⊖ while the count-up is stopped will switch the function from count-up to countdown. Pressing “START/STOP” will start the countdown from the displayed time.

A slightly convenient method when attached with the magnet

If the **bottom-center of the clock is lightly pressed** as per the diagram shown at right, the attached surface will help press “START/STOP”, making it easier to start/stop the timer.

⚠Caution Pressing strongly or pressing parts of the clock not stated above may cause the clock to fall.

Troubleshooting

Effect Cause	Display is dim, certain portions missing. Low battery power or the effect of static electricity.
Countermeasures	Remove the battery and then insert again. If there is no improvement, replace with new batteries.

